ST-H2750/H3750

SERVICE MANUAL

US Model
Canadian Model

Photo is ST-H3750

This set is the tuner section in MHC-2750/3750

SPECIFICATIONS

System	FM stereo, AM superheterodyne tuner
FM tuner section	
Tuning range	87.5 — 108 MHz
Antenna terminals	75 ohms unbalanced
Intermediate frequency	10.7 MHz
AM tuner section	
Tuning range	530 — 1,710 kHz (with the AM tuning interval set at 10 kHz) 531 — 1,602 kHz (with the AM tuning interval at 9 kHz)
Antenna	AM loop antenna, External antenna terminals
Intermediate frequency	450 kHz

Design and specifications subject to change without notice.

TABLE OF CONTENTS

Section *Title* *Page*

1. SERVICING NOTES
1-1. Supply of Power During Services 2
1-2. Service Mode to Check Timer ON-OFF 2
1-3. Service Mode to Check FL Tube and Key Input .. 3
1-4. How to Forcefully Turn Power ON 3

2. GENERAL 4
Parts Identification 4
Clock Setting 4
Tuning in Automatically 5
Tuning in Manually 5
Storing Stations 6
To Tune in a Preset Station 6

3. ELECTRICAL ADJUSTMENTS 7

4. DIAGRAMS
4-1. Block Diagram 9
4-2. Schematic Diagram —Tuner Section— 13
4-3. Printed Wiring Boards —Tuner Section— 15
4-4. Schematic Diagram —Display Section— 17
4-5. Printed Wiring Board —Display Section— 19
4-6. Pin Description 21
4-7. Semiconductor Lead Layouts 22

5. EXPLODED VIEW 23

6. ELECTRICAL PARTS LIST 24

FM STEREO/FM-AM TUNER

SONY®

SECTION 1
SERVICING NOTES

1-1. SUPPLY OF POWER DURING SERVICES

Because the equipment is not provided with any power supply, it is operated with power supplied from the amplifier DXA-H2750/H3750 used in the series. The equipment requires the following 4 types of voltages. Therefore, connect the equipment to DXA-H2750/H3750 for services such as repairing with power supplied, because it will be too complicated to supply these voltages individually.

VOLTAGE	MAJOR CIRCUIT IN USE
AC 3.9V	FL tube filament voltage (VF)
DC −24V	Display controller IC701 grid voltage (VG)
DC 5.6V	Display controller IC701, Tuner PLL IC81 Vcc
DC 12V	Tuner RF, FM/AM DET IC21 Vcc

1-2. SERVICE MODE TO CHECK TIMER ON-OFF

It is possible to check whether the timer normally functions while being connected with an amplifier.

(1) Connect the equipment to the amplifier DXA-H2750/H3750 and set the SYSTEM POWER switch to STAND-BY state.
(2) Set the time of the tuner to any time.
(3) Press 3 switches "BAND", "−" and "MEMORY/NEXT" at the same time (while pressing "BAND" and "−" beforehand, finally press "MEMORY/NEXT")
(4) FL display tube

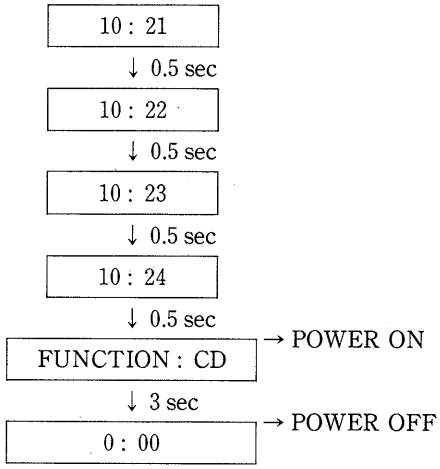

(5) Completion

Note : After completion of the checking above, data preset in the memory IC702 is erased while resetting the memory to the next page state upon shipping from the works, so be sure to recover the same frequency as that before the repairing.

• Frequencies initially preset

	FM	AM	
		10k STEP	9k STEP
1	87.5MHz	530kHz	531kHz
2	88.0MHz	620kHz	621kHz
3	98.0MHz	1050kHz	1053kHz
4	100.0MHz	1490kHz	1485kHz
5	108.0MHz	1710kHz	1710kHz
6—20	*1	*2	*2

*1 The same frequency values are set for the preset memory No. 6—No. 10, No. 11—No. 15 and No. 16—No. 20 as for No. 1—No. 5 respectively.
*2 The same frequency values are set for the preset memory No. 6—No. 10 as for No. 1—No. 5.

1-3. SERVICE MODE TO CHECK FL TUBE AND KEY INPUT

It is possible to check FL tube all ON grid, segment and key input.

(1) Connect the equipment to the amplifier DXA-H2750/H3750 and remove the AC cord of the amplifier out of the AC receptacle.
(2) While pressing 3 switches "BAND", "−" and "MEMORY/NEXT" at the same time, insert the AC cord of the amplifier into the receptacle.
(3) Thus, all FL display tubes light up. By pressing "+" or "TIMER CONTROL" in this state, partial lighting or key input checking, respectively, is effected.

Partial lighting: Indicates the mode to check complete connection between the grid and segment of the FL tube. The condition is normal when the following indication is effected. By pressing "+" or "−" in the partial lighting mode, the status returns to key input checking or all ON in (3), respectively.

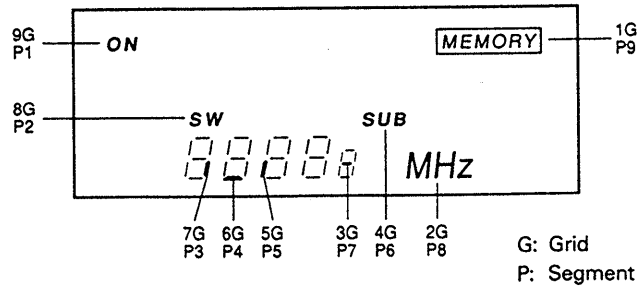

Key input checking: Shows the mode to check key input into 9 keys on the front panel. "0" is indicated at first, and every time a different key is pressed, indicated number is increased. After completion of pressing all 9 keys, "PASS" is indicated.
(Once a key is pressed, pressing it again is rejected.)

(4) After the completion of the checking, the equipment recovers normal operation by once removing the AC cord and inserting it again into the AC receptacle.

1-4. HOW TO FORCEFULLY TURN POWER ON

The equipment is not provided with any power switch. Therefore, power ON/OFF is controlled in the amplifier side. However, even without an amplifier, power is supplyable to the equipment according to the following methods provided any type of power is available, e.g. using a special jig or supplying the 4 types of voltages individually.
(When power is supplied from the amplifier, power is turned ON only for the tuner.)

(1) Supply power.
(2) Press 3 switches "STEREO/MONO", "−" and "MEMORY/NEXT" at the same time.
(Press "STEREO/MONO" and "−" beforehand, and finally press "MEMORY/NEXT".)

However, when the equipment is started up by the methods above, service modes TIMER ON/OFF and FL tube and key input checking are not operable.

SECTION 2
GENERAL

This section is extracted from instruction manual.

Parts Identification

A

Refer to the pages indicated in ● for use of the buttons.

Tuner Section A

1 Remote control sensor
2 REC/TIMER button ⑳
3 Display window
4 MEMORY/NEXT button ⑩ ㉗ ㊽ ㊿
5 STEREO/MONO (stereo/monaural) button ㉖
6 MODE button and TUNING/PRESET indicators ㉓ ㉕ ㉘
7 TUNING PRESET/TIMER –/+ buttons
8 BAND selector ㉕
9 WAKE UP TIMER 1, 2 /CLOCK SET buttons ⑩ ㊽

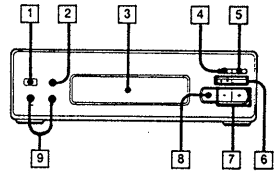

Clock Setting

Setting the Clock

Example: Set to AM 9:25 in the morning.

1 **Press WAKE UP TIMER 1 and 2 at the same time.**

2 **Set the hour with the – or + button.**

3 **Press MEMORY/NEXT.**

4 **Set the minute with the – or + button.**

5 **Press MEMORY/NEXT.**
The clock starts operating.



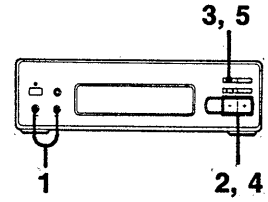

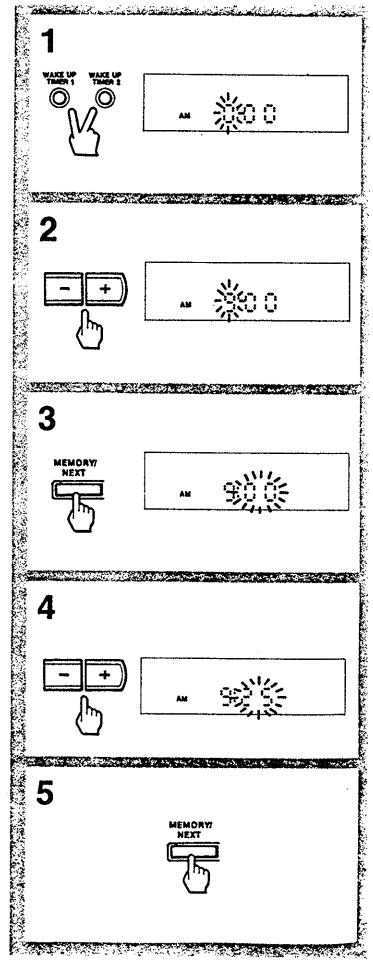

When a power interruption occurs
The clock and timer settings are all erased, and "AM 12:00" will flash on the display.

To change the frequency display to the time display
Press CLOCK DISPLAY on the remote commander. Press it again to change to the frequency display.

10

Radio Reception

The automatic tuning allows you to receive stations whose signal is strong enough. When the signal is too weak, use the manual tuning.

Tuning in Automatically

1 Press BAND repeatedly until the desired band appears.
As you press BAND, the band changes as follows:
FM ⟷ AM

2 Press MODE so that the TUNING indicator lights up.

3 Keep – or + depressed for more than 1 second.
"AUTO" appears on the display and the unit tunes in a station automatically.

Repeat step 3 until the desired station appears.

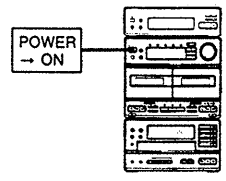

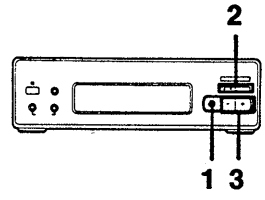

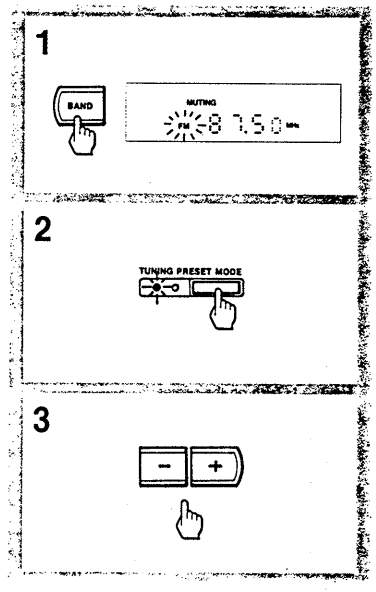

Radio Reception

Tuning in Manually

1 Press BAND repeatedly until the desired band appears.

2 Press MODE so that the TUNING indicator lights up.

3 Press – or + repeatedly until the desired station appears.

Indicators on the display

TUNED: Appears when a station with sufficient signal strength is tuned in.
STEREO: Appears when an FM stereo program with sufficient signal strength is received.

Antenna adjustment A

For AM reception, find the best location for the supplied AM loop antenna.

When an FM program is noisy or hard to receive

Press STEREO/MONO so that "MONO" appears in the display. There will be no stereo effect, but the reception will be improved. Press the button again to restore the stereo effect.

Changing the AM tuning interval
The AM tuning interval is preset at the factory to 10 kHz.
If you use the system where the frequency allocation system is different from the preset interval, change the interval as follows:
1 Turn on the power.
2 Tune in an AM station.
3 Disconnect the AC power cord.
4 Connect the AC power cord again while pressing TUNING +.
To reset the interval, follow the same procedure.

Important

When the interval is changed, stored stations will be erased from the memory.

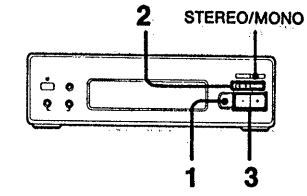

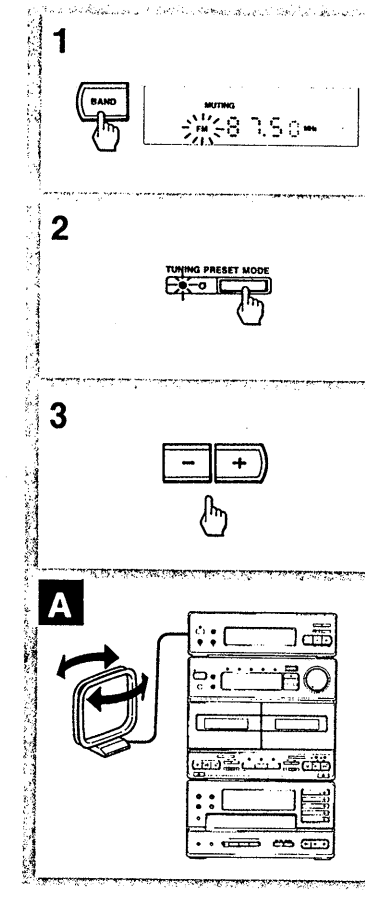

25 26

Radio Reception

Storing Stations

You can store up to 20 FM stations and 10 AM stations in a desired sequence, so that you can tune in the stored station directly by entering the preset station number. This operation is not possible with the remote commander.

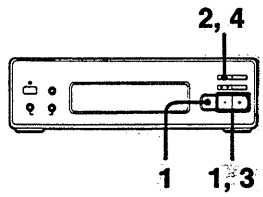

1 **Tune in the desired station.**

2 **Press MEMORY/NEXT.**
"MEMORY" and the preset station numbers appear on the display.

3 **While "MEMORY" is on (for several seconds), press – or + to select a desired preset number.**

4 **Press MEMORY/NEXT.**
"MEMORY" disappears, and the station is stored.

Repeat steps 1 to 4 for each station to be stored.

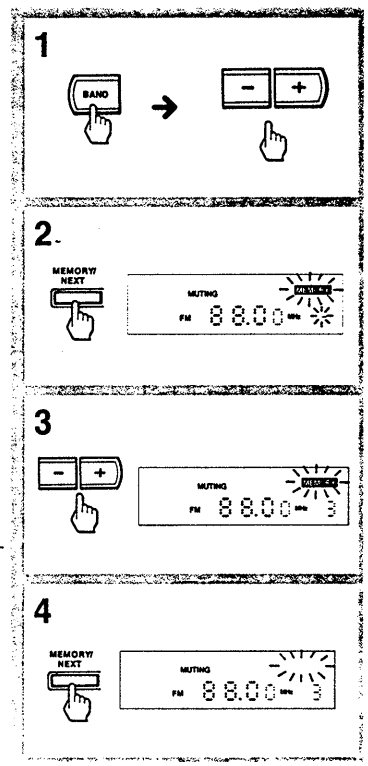

If you cannot store a station successfully
Press MEMORY/NEXT again so that "MEMORY" appears, and then proceed with steps 3 and 4 above.
Be sure to operate while "MEMORY" is on (about 4 seconds).

When you have selected the wrong preset station number
Press MEMORY/NEXT again and then proceed with the steps 3 and 4.

To change the preset station
Store a desired station at the desired preset number by proceeding with the above steps.
The station previously preset will be erased.
Erasing only is not possible.

Radio Reception

To Tune in a Preset Station

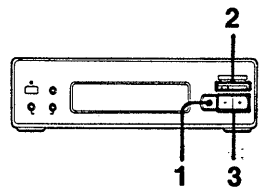

1 **Press BAND to select a desired band.**

2 **Press MODE so that the PRESET indicator lights up.**

3 **Press – or + to select the desired preset station number.**

To tune in a preset station directly A

(Possible only with the remote commander)
1 Set the TUNER/EQ/CD numeric button function selector to TUNER.
2 Press BAND to select a desired band.
3 Press the numeric buttons to select the desired preset station number.

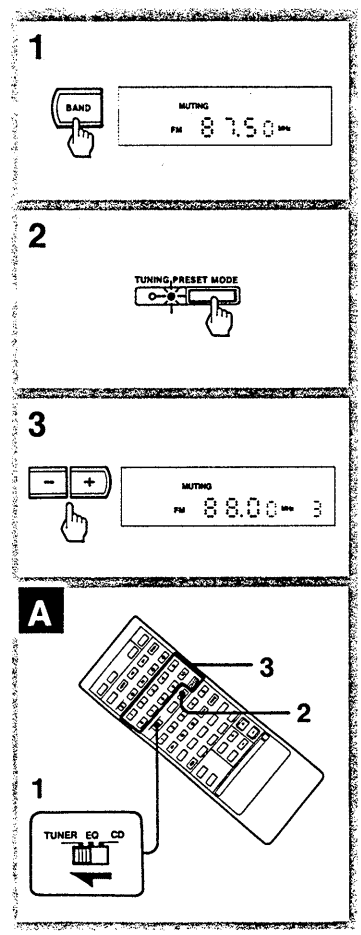

SECTION 3
ELECTRICAL ADJUSTMENTS

Precautions in Repairing

If the front end unit fails, it is difficult to repair the inner circuits, so replace the entire front end unit.

FM SECTION

FM Discriminator Adjustment (NULL Adjustment)

Setting :

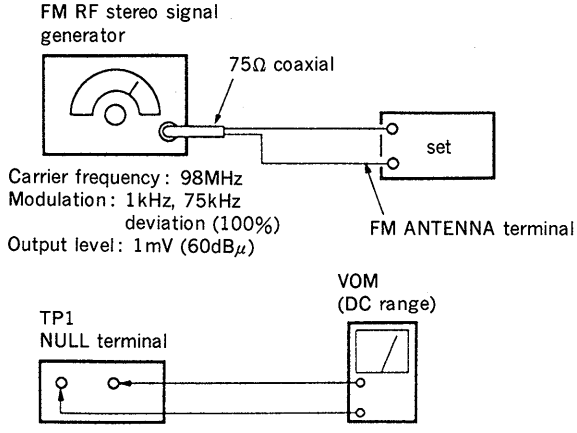

Procedure :

1. Tune the set to 98MHz.
2. Adjust T21 for 0V reading on the VOM.

Note : FM Tuning Level adjustment should be made after FM discriminator alignment.

FM Tuning Level Adjustment

Setting :

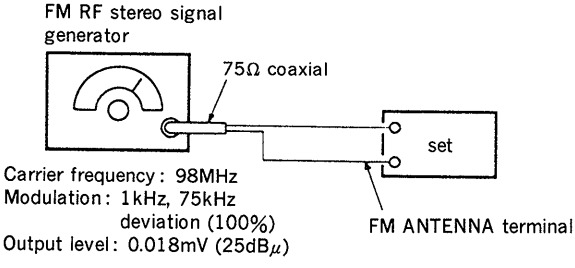

Procedure :

1. Tune the set to 98MHz.
2. Adjust RV24 so that the TUNED indicator goes on.

FM Stereo Separation Adjustment

Setting :

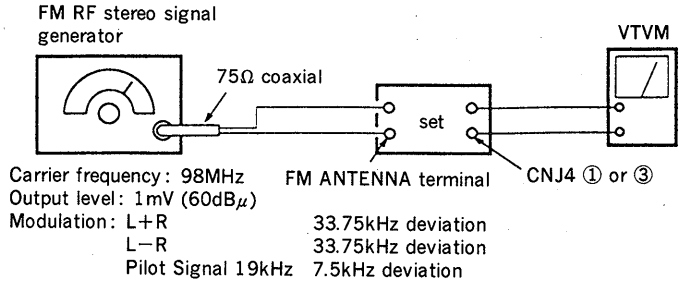

Procedure :

Tune the set to 98MHz.

FM stereo Signal generator Output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV21 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV21 for minimum reading.

L-CH Stereo separation : Ⓐ—Ⓑ
R-CH Stereo separation : Ⓒ—Ⓓ

The separations of both channels should be equal.

AM SECTION

AM Tuning Level Adjustment

Setting :

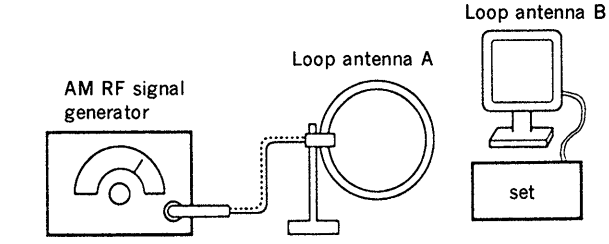

Carrier frequency : 1050kHz
30% amplitude
modulation by 400Hz signal

Procedure :

1. Set loop antenna A so that the loop antenna B input level becomes 58dBμ/m (0.8mV/m)
2. Tune the set to 1050kHz.
3. Adjust the RV22 so that the TUNED indicator goes on.

Adjustment Location :

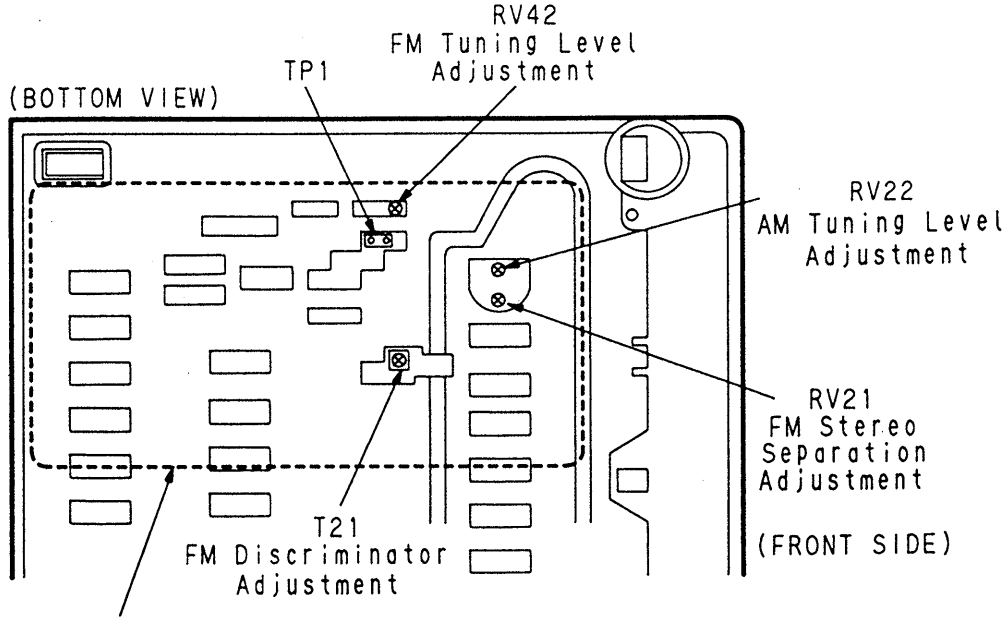

TUNER BOARD

SECTION 4
DIAGRAMS

4-1. BLOCK DIAGRAM

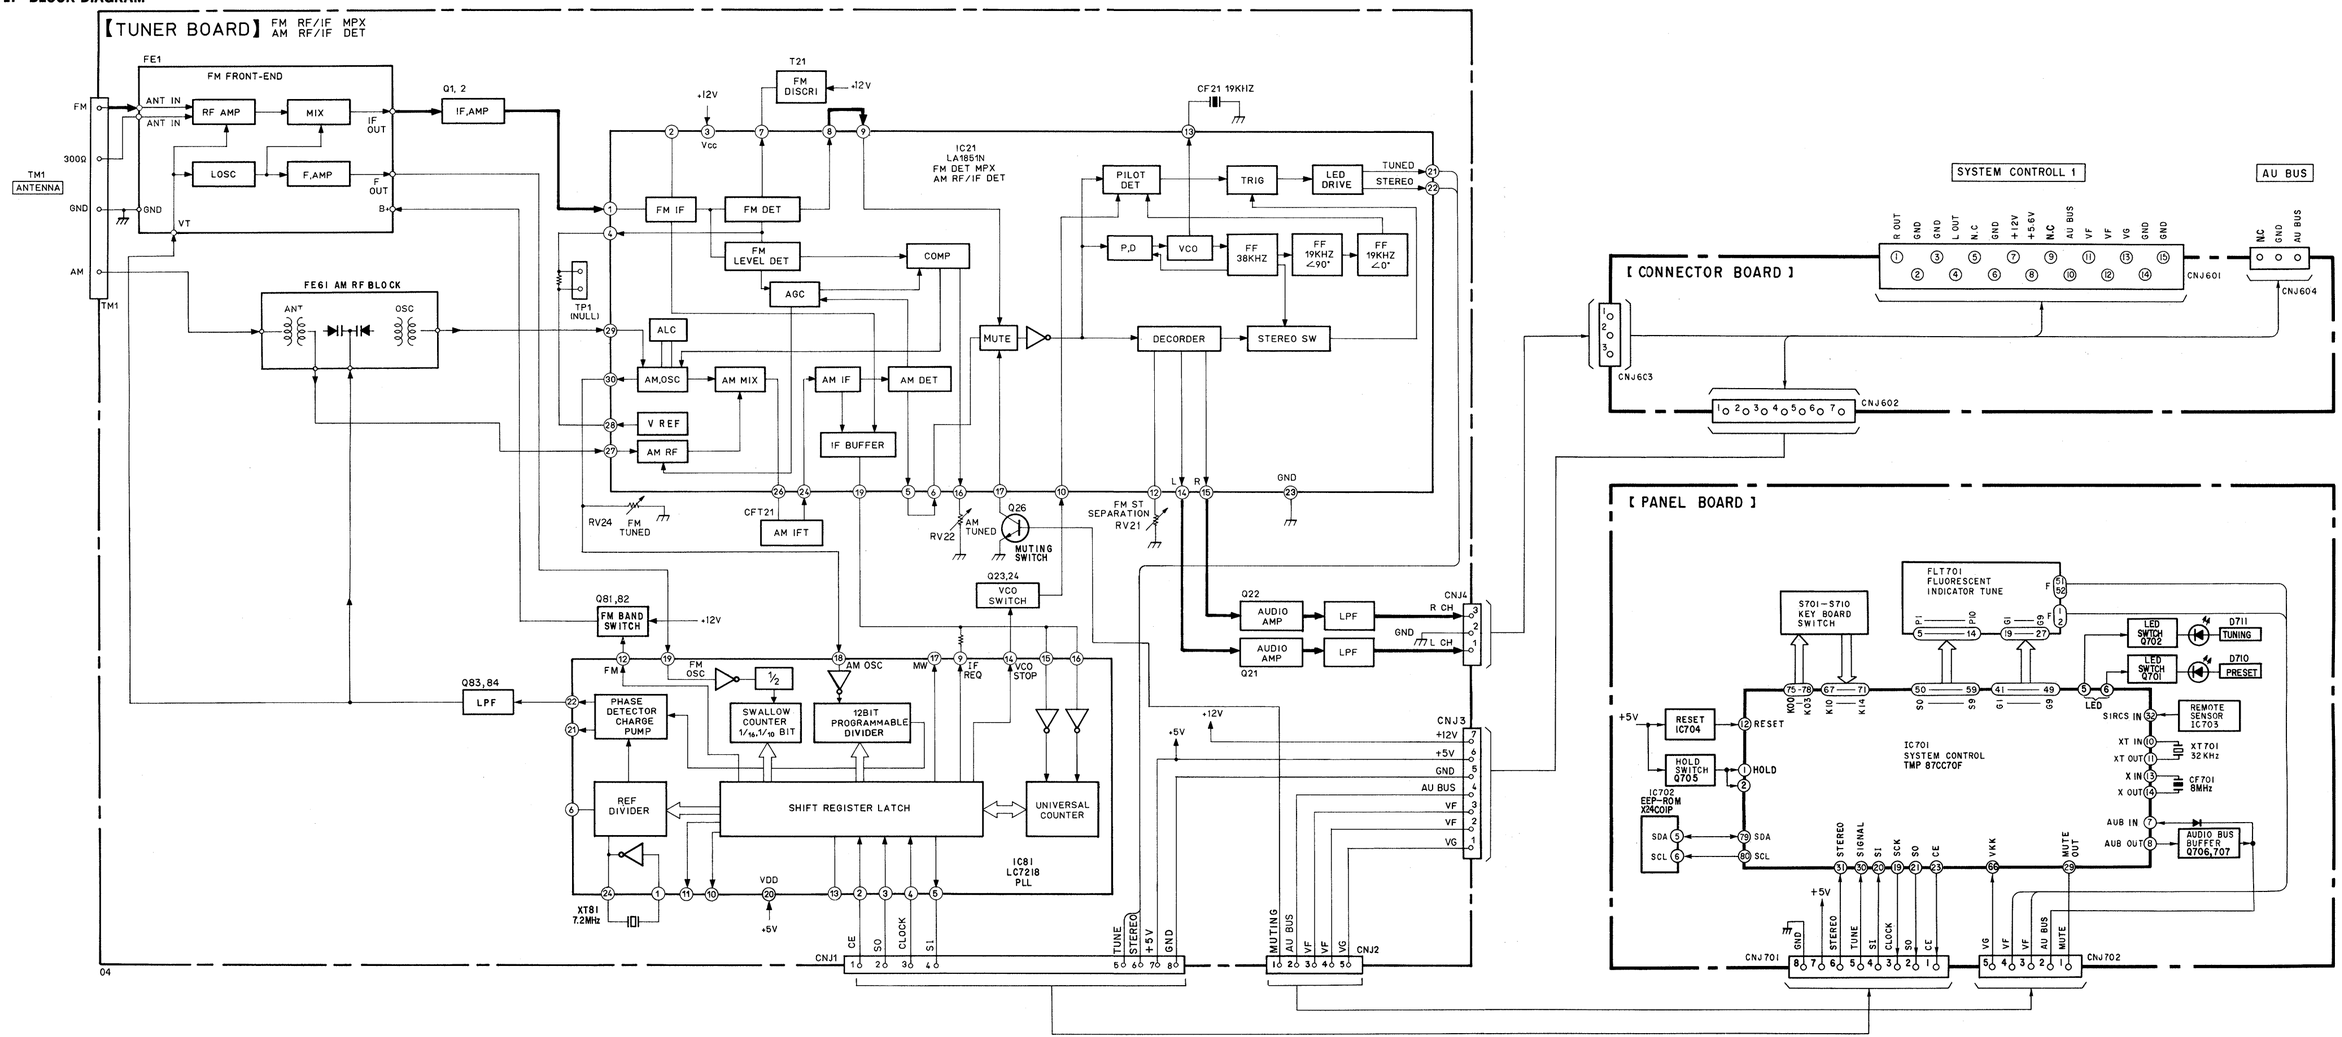

ST-H2750/H3750 ST-H2750/H3750

• IC Block Diagrams

IC21 LA1851N

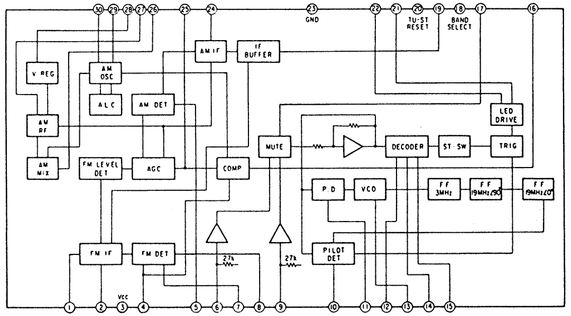

IC81 LC7218

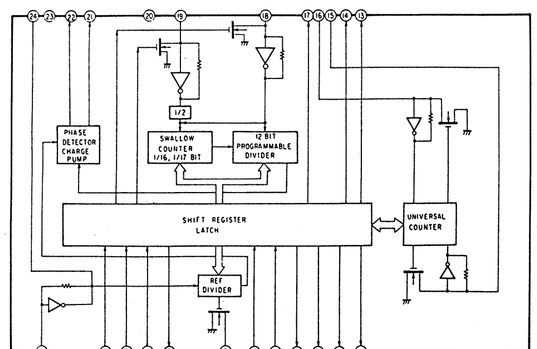

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ⌨ : nonflammable resistor.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- ▭ : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
  ( ): AM
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : FM

4-2. SCHEMATIC DIAGRAM —TUNER SECTION—

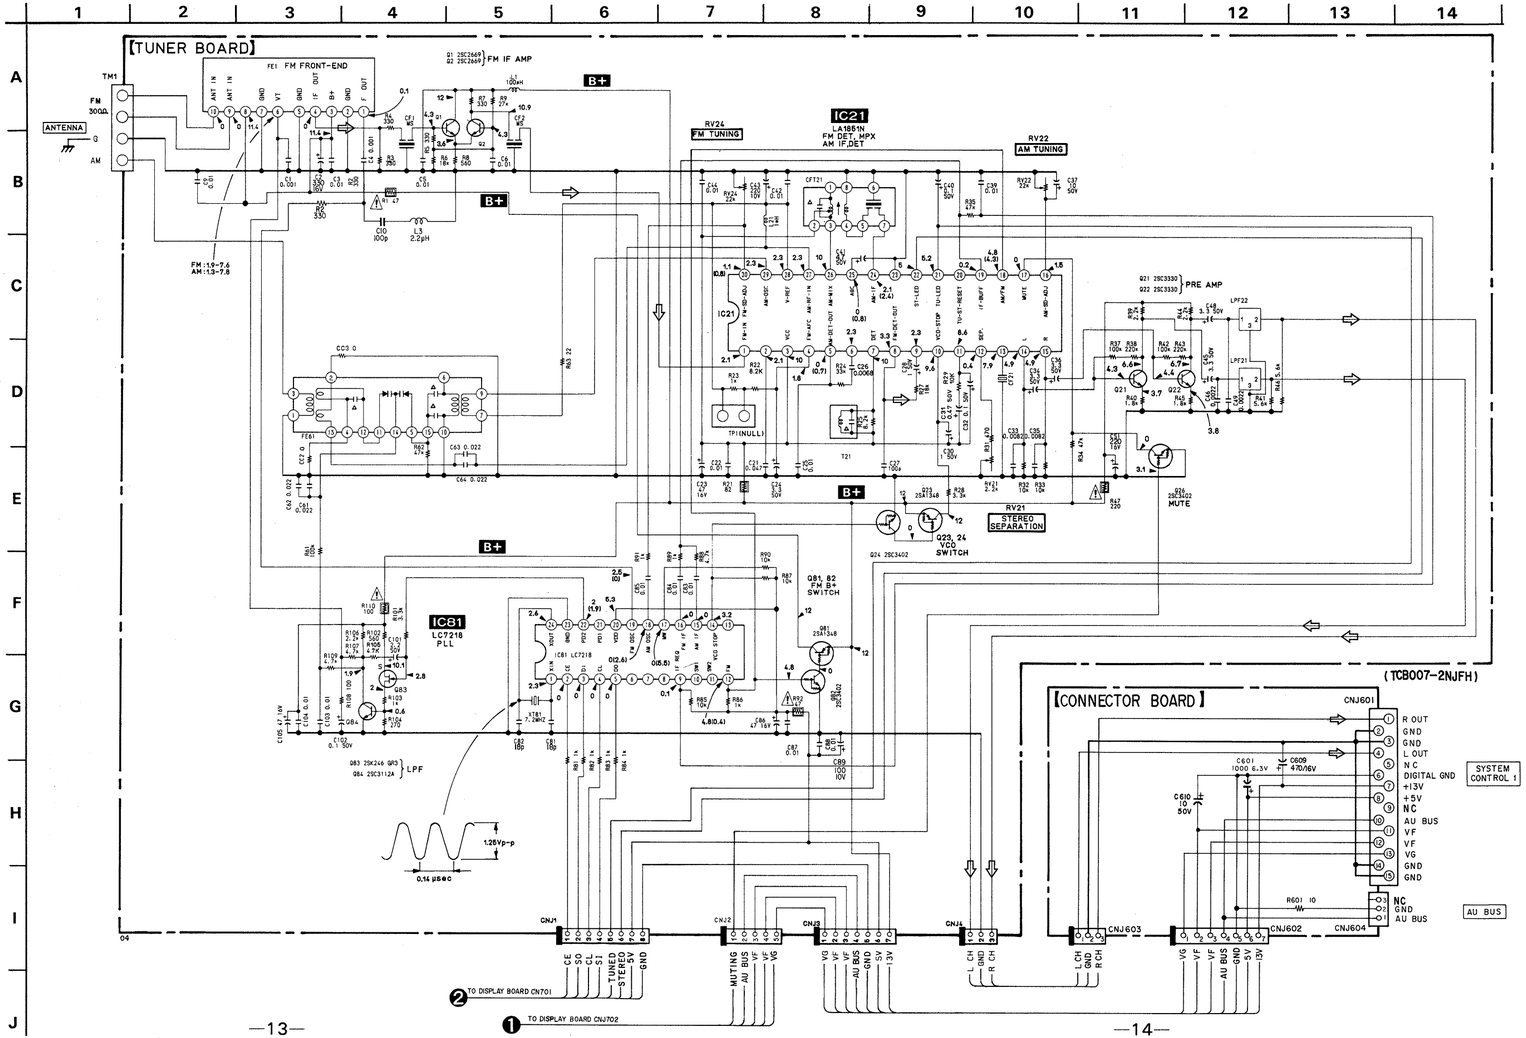

4-3. PRINTED WIRING BOARDS —TUNER SECTION— • Refer to page 22 for Semiconductor Lead Layouts.

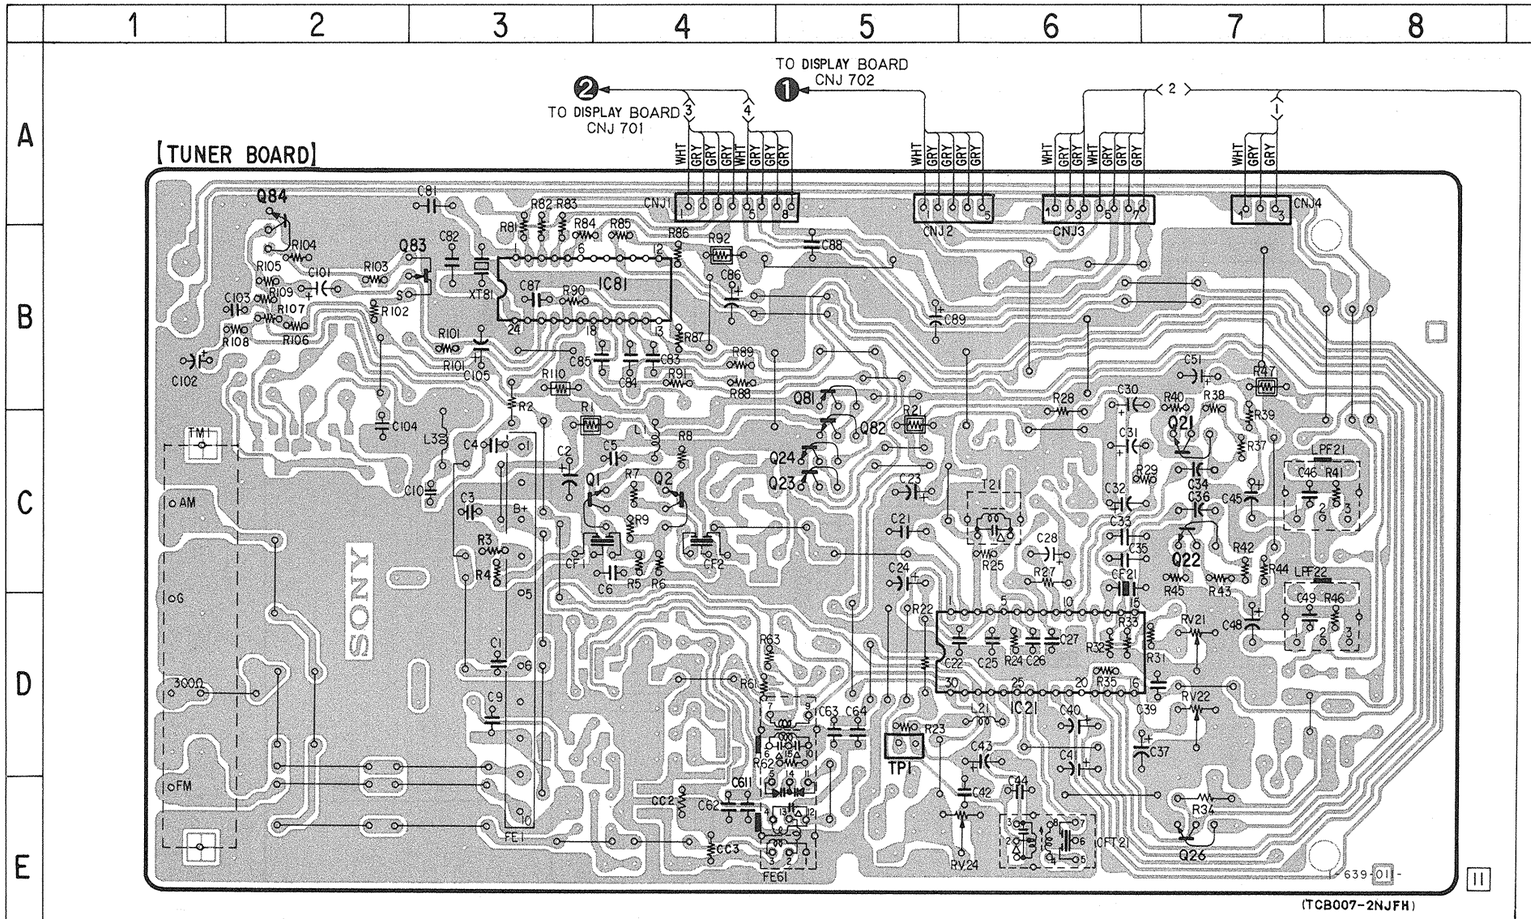

• Semiconductor Location

Ref. No.	Location
IC21	D-6
IC81	B-4
Q1	C-4
Q2	C-4
Q21	C-7
Q22	C-7
Q23	C-5
Q24	C-5
Q26	E-7
Q81	B-5
Q82	C-5
Q83	B-3
Q84	A-2

Note:

• ○—— : parts extracted from the component side.

4-4. SCHEMATIC DIAGRAM —DISPLAY SECTION—

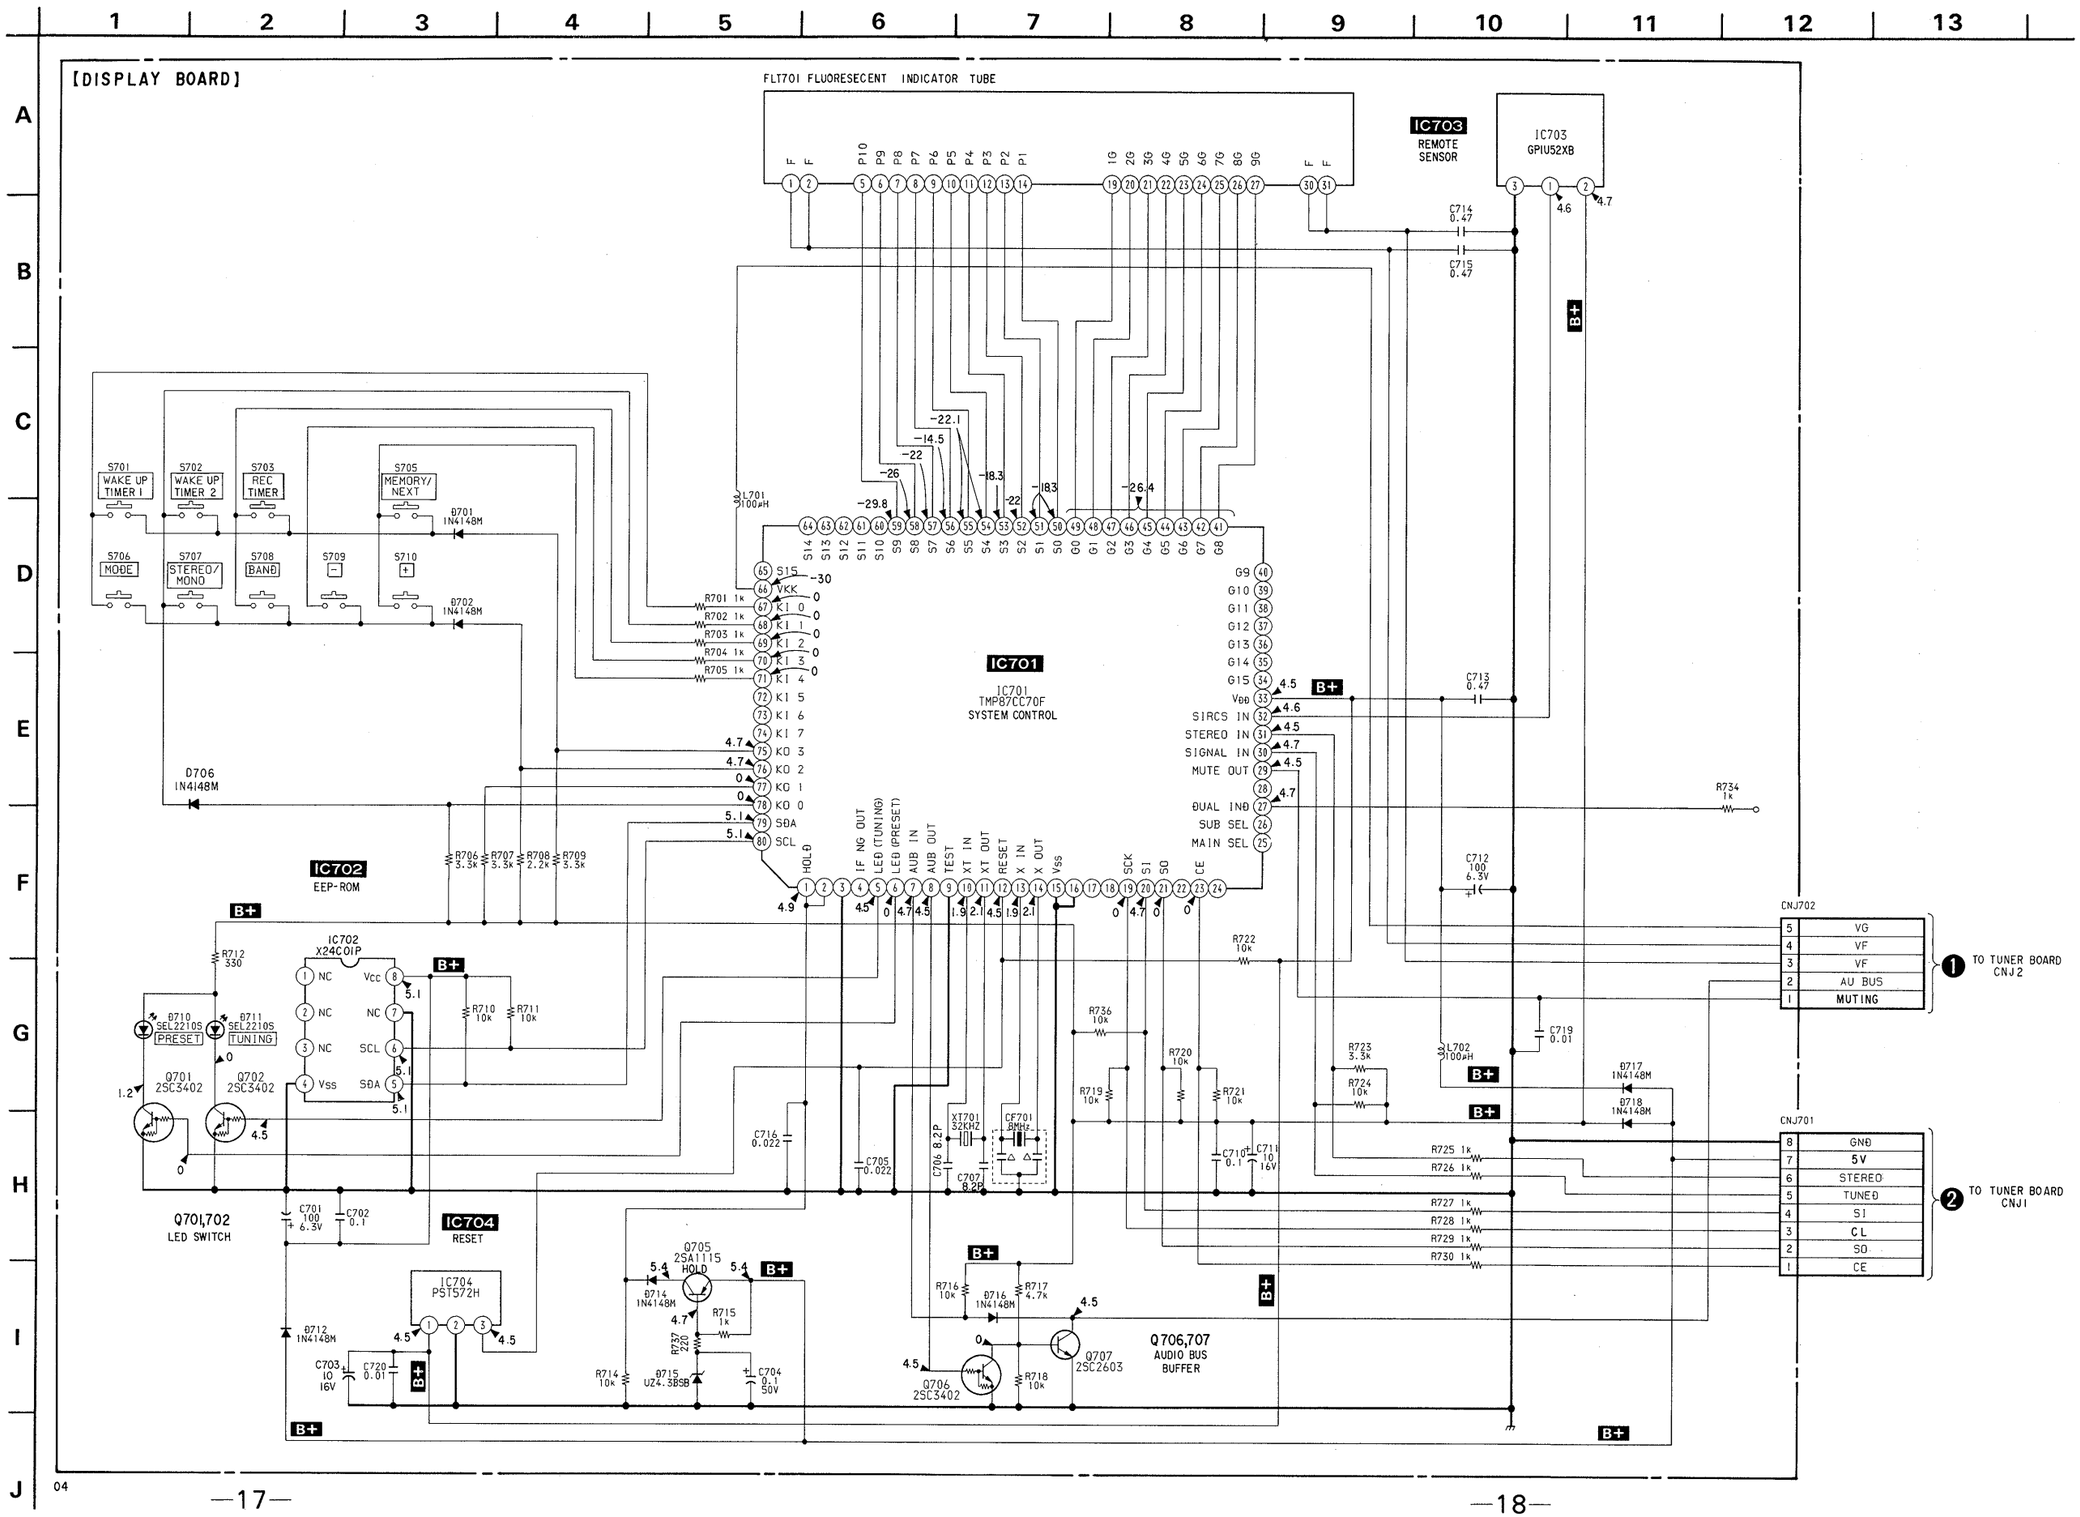

4-5. PRINTED WIRING BOARD —DISPLAY SECTION—

• Refer to page 22 for Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location
D701	D-3
D702	D-3
D706	E-4
D710	D-2
D711	D-2
D712	D-7
D714	E-8
D715	E-9
D716	E-8
D717	D-6
D718	D-7
IC701	E-5
IC702	D-6
IC703	D-9
IC704	E-8
Q701	D-2
Q702	D-2
Q705	E-8
Q706	D-8
Q707	D-8

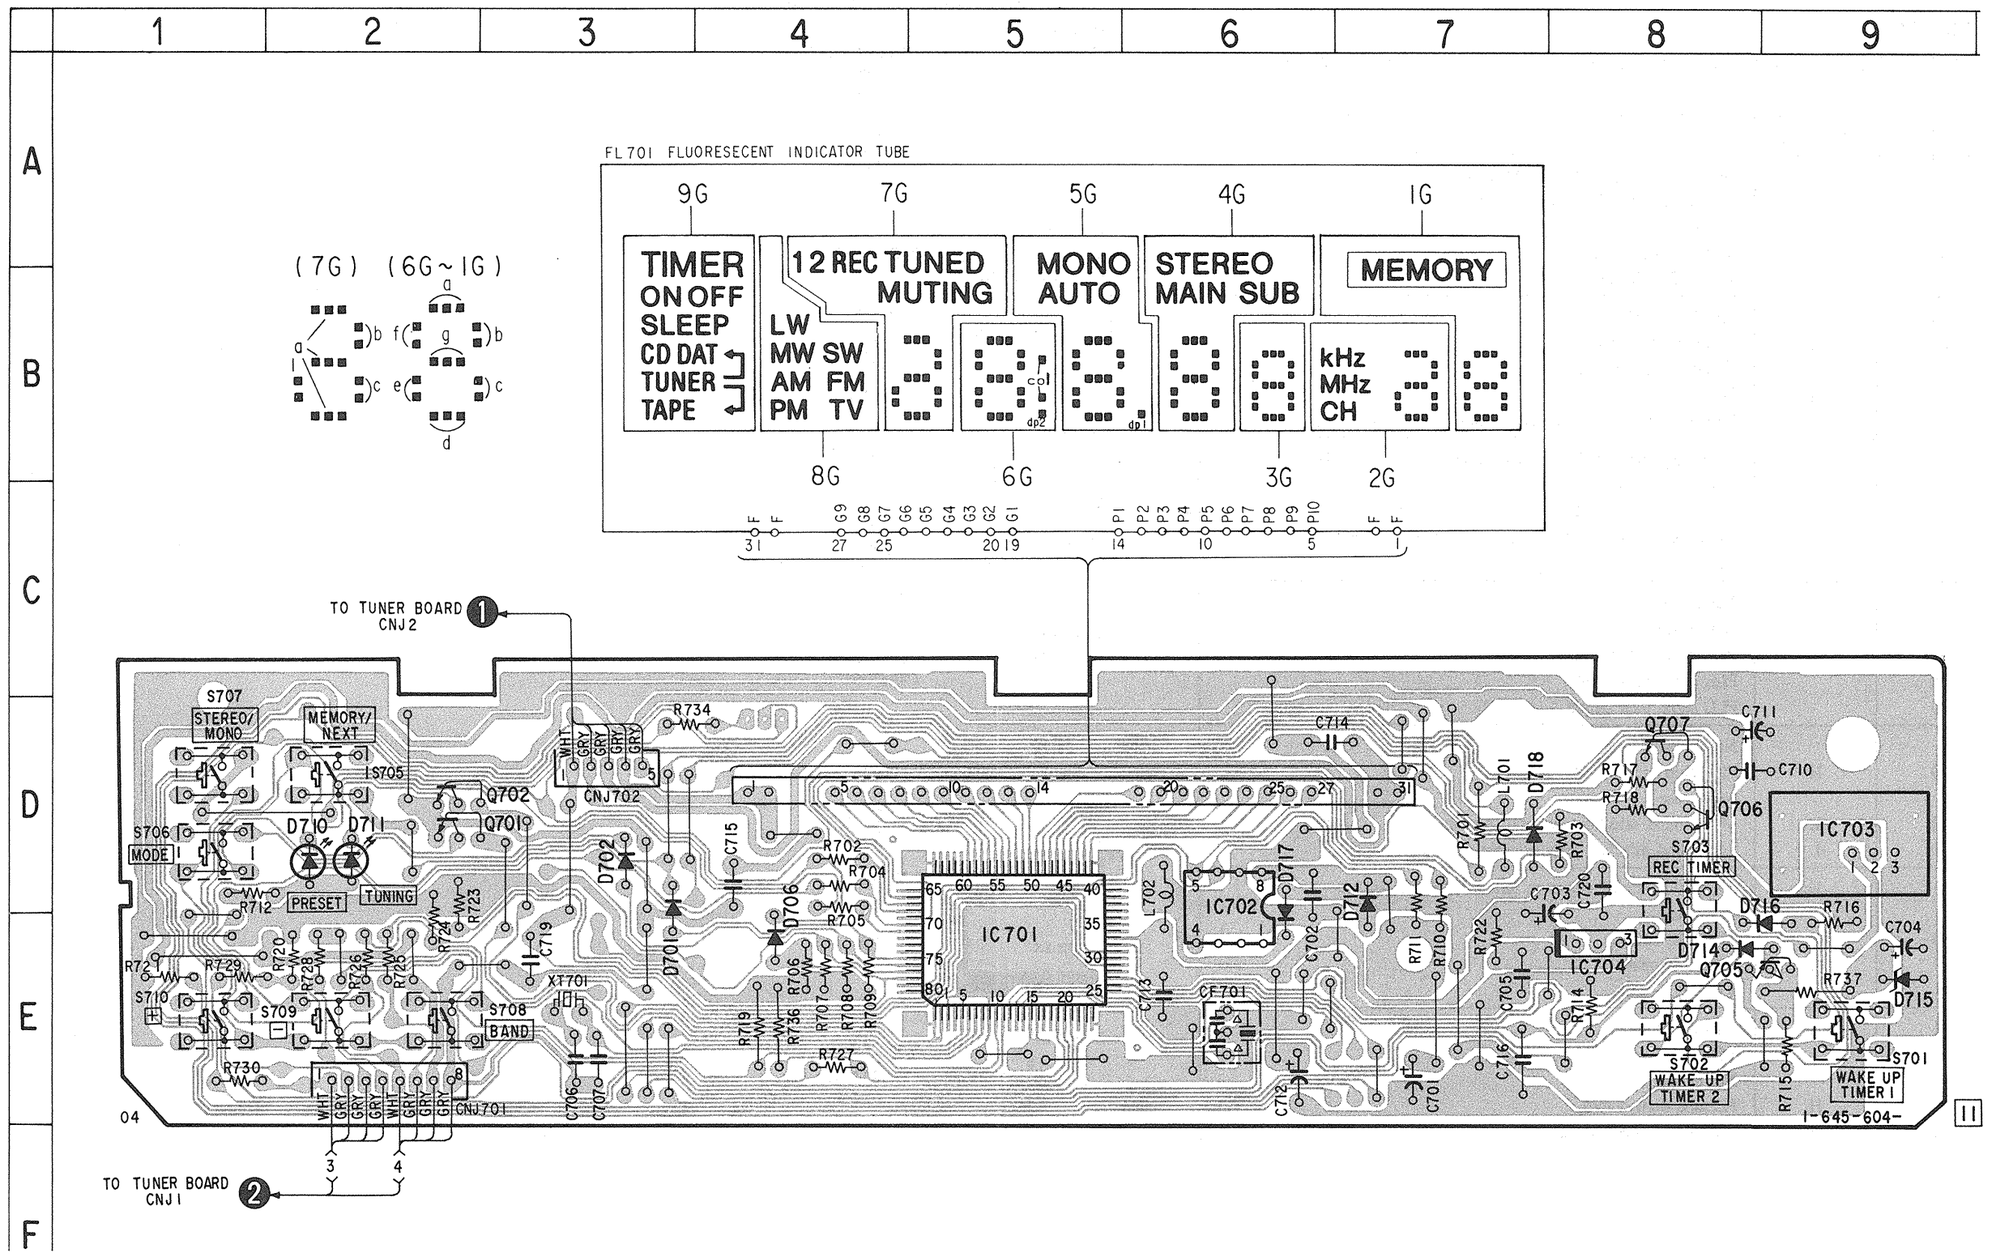

Note on Printed Wiring Board:

• ○—— : parts extracted from the component side.

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.

4-6. PIN DESCRIPTION

• IC701 System Controller (TMP87CC70F)

The terminals work to control tuner section (IC21, 81), FL tube display and reading and writing of IC702 (preset data), etc. according to key input and signal from the remote controller.

PIN No.	PIN NAME	I/O	ACTIVE	PIN FUNCTION
1	HOLD	I	↓	HOLD detecting interrupt terminal
2	HOLD RESET	I	↑	HOLD resetting interrupt terminal
3		I		Not in use
4	IF NGOUT	O	H	IF count NG output
5	LED1	O	H	TUNING LED ON
6	LED2	O	H	PRESET LED ON
7	AUB IN	I	L	AUDIO BUS input
8	AUB OUT	O	L	AUDIO BUS output
9	TEST	I	H	Test terminal
10	XT IN	I		Low frequency oscillator connection terminal (32KHz)
11	XT OUT	O		Low frequency oscillator connection terminal (32KHz)
12	RESET	I	L	Reset signal input
13	X IN	I		High frequency oscillator connection terminal (8MHz)
14	X OUT	O		High frequency oscillator connection terminal (8MHz)
15	VSS			GND
16		I		Not in use
17, 18		O		Not in use
19	SCK	O		PLL serial clock output
20	SI	I		PLL serial data input
21	SO	O		PLL serial data output
22				Not in use
23	CE	O	H	PLL chip enable
24				Not in use
25	MAIN SEL	O	L	Main sound selection terminal (Not in use)
26	SUB SEL	O	L	Sub sound selection terminal (Not in use)
27	DUAL IND	I	L	Sound dual signal detection terminal (Not in use)
28				Not in use
29	MUTE OUT	O	L	MUTING output
30	SIGNAL IN	I	L	TUNED input
31	STEREO IN	I	L	STEREO input
32	SIRCS IN	I	L	SIRCS input
33	VDD			+5V
34 - 40		O		Not in use
41 - 49	G0 - G8	O	H	FL tube digit output
50 - 59	S0 - S9	O	H	FL tube segment output
60 - 65		O	H	Not in use
66	VKK			FL tube driving power supply
67 - 71	KI0 - KI4	I	H	Key input
72		I		Not in use
73, 74				Not in use
75 - 78	KO0 - KO3	O	H	Key output
79	SDA	I/O		Data input/output for EEPROM
80	SCL	O		Clock output for EEPROM

4-7. SEMICONDUCTOR LEAD LAYOUTS

GP1U52XB



LA1851N

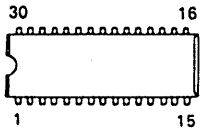

LC7218

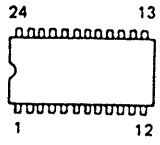

PST572H

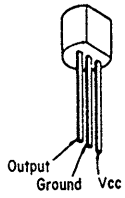

TMP87CC70F

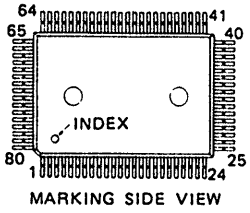

X24C01P

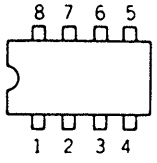

DTA114ES
DTC114ES
2S2603-EF
2SC2669-0Y
2SC3113-AB



2SA1175-HFE
2SC2785-HFE



2SC3330-T



2SK246-GR3



UZ-4.3BSB
1N4148M



1SS120

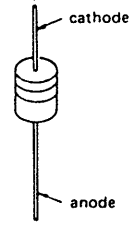

SEL2210S-D

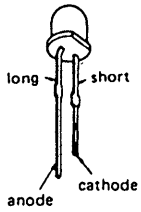

SECTION 5
EXPLODED VIEW

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

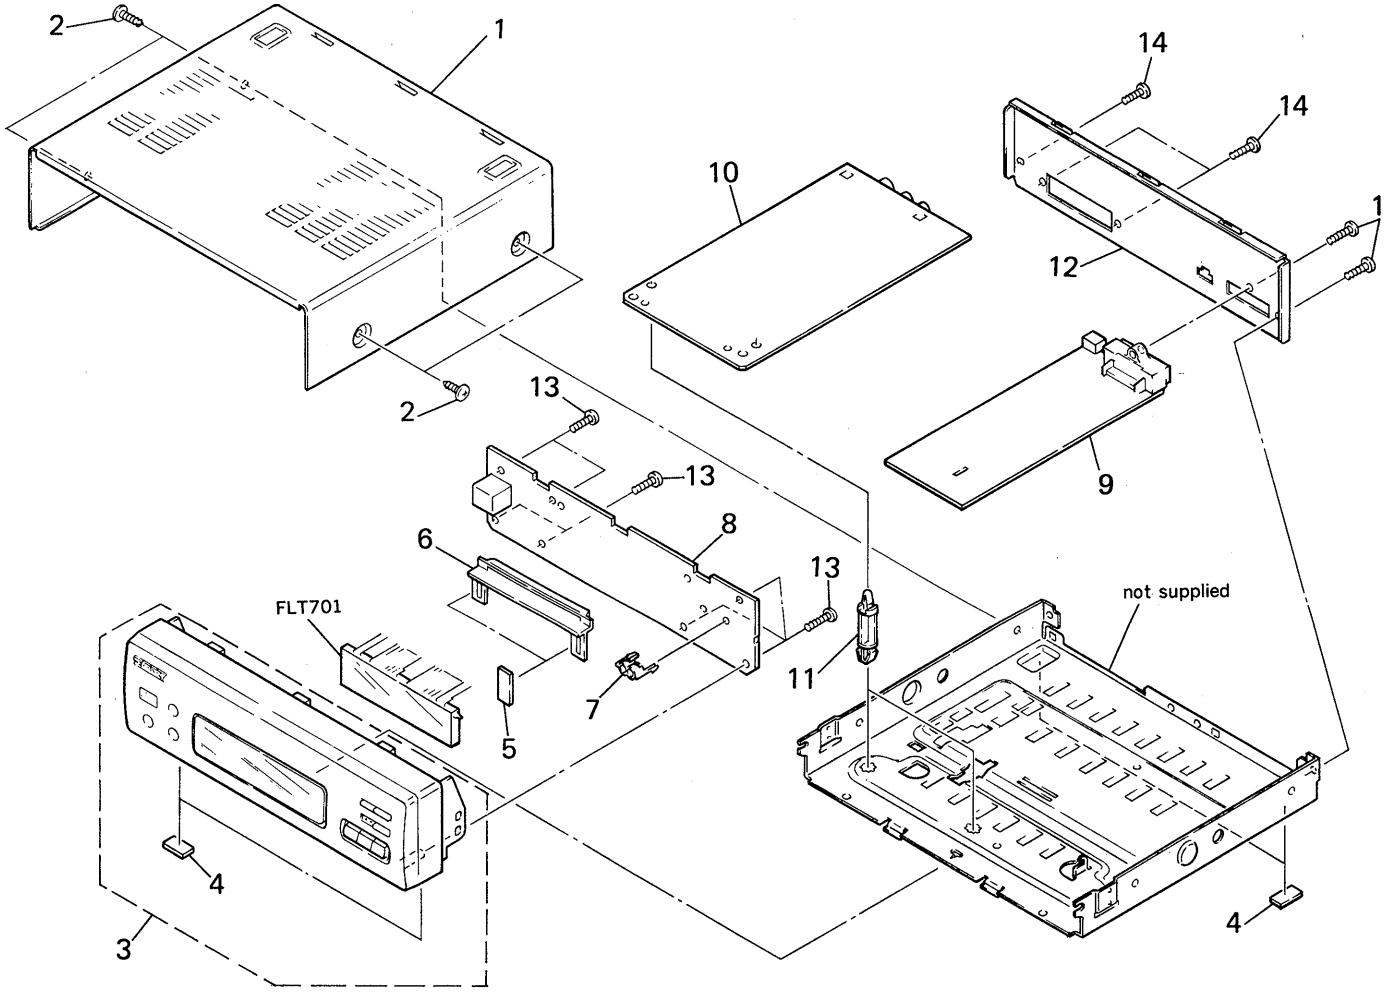

Ref. No.	Part No.	Description	Remark
* 1	4-944-423-61	CASE (K206522)	
2	3-363-099-01	SCREW (CASE 3 TP2)	
3	X-4942-950-1	PANEL ASSY, FRONT (H2750)	
3	X-4942-951-1	PANEL ASSY, FRONT (H3750)	
4	4-930-336-21	FOOT (FELT)	
* 5	4-932-810-11	CUSHION (FL)	
* 6	4-944-441-01	HOLDER (FL TUBE)	
* 7	4-954-788-01	HOLDER (LED)	
* 8	A-4356-143-A	DISPLAY BOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
* 9	1-645-605-12	CONNECTOR BOARD	
* 10	A-4303-369-A	TUNER BOARD, COMPLETE (TCB007-2NJFH)	
* 11	4-914-008-01	HOLDER, PCB	
* 12	4-953-719-01	PANEL, BACK (H2750)	
* 12	4-953-719-41	PANEL, BACK (H3750)	
13	4-951-620-01	SCREW (2.6X8), +BVTP	
14	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
FLT701	1-519-709-11	INDICATOR TUBE, FLUORESCENT	

TUNER

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remark
*	A-4303-369-A	TUNER BOARD, COMPLETE(TCB007-2NJFH)			
		**********			
		< CAPACITOR >			
C1	1-162-294-11	CERAMIC CHIP	0.001uF	20%	25V
C2	1-124-119-00	ELECT	330uF	20%	16V
C3	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C4	1-162-294-31	CERAMIC CHIP	0.001uF	20%	25V
C5	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C6	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C9	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C10	1-162-516-11	CERAMIC CHIP	100PF	10%	50V
C21	1-101-006-00	CERAMIC	0.047uF		50V
C22	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C23	1-124-477-11	ELECT	47uF	20%	16V
C24	1-123-382-00	ELECT	3.3uF	20%	50V
C25	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C26	1-163-019-00	CERAMIC CHIP	0.0068uF	20%	12V
C27	1-162-516-11	CERAMIC CHIP	100PF	10%	50V
C28	1-124-903-11	ELECT	1.0uF	20%	50V
C30	1-124-903-11	ELECT	1.0uF	20%	50V
C31	1-124-902-00	ELECT	0.47uF	20%	50V
C32	1-124-463-00	ELECT	0.1uF	20%	50V
C33	1-130-482-00	FILM	0.0082uF	5%	50V
C34	1-123-382-00	ELECT	3.3uF	20%	50V
C35	1-130-482-00	FILM	0.0082uF	5%	50V
C36	1-123-382-00	ELECT	3.3uF	20%	50V
C37	1-124-907-11	ELECT	10uF	20%	50V
C39	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C40	1-124-463-00	ELECT	0.1uF	20%	50V
C41	1-124-927-11	ELECT	4.7uF	20%	50V
C42	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C43	1-126-176-11	ELECT	220uF	20%	10V
C44	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C45	1-123-382-00	ELECT	3.3uF	20%	50V
C46	1-161-375-00	CERAMIC CHIP	0.0022uF	20%	25V
C48	1-123-382-00	ELECT	3.3uF	20%	50V
C49	1-161-375-00	CERAMIC CHIP	0.0022uF	20%	25V
C51	1-126-934-11	ELECT	220uF	20%	16V
C61	1-163-063-00	CERAMIC MELF	0.022uF		25V
C62	1-163-063-00	CERAMIC MELF	0.022uF		25V
C63	1-163-063-00	CERAMIC MELF	0.022uF		25V
C64	1-163-063-00	CERAMIC MELF	0.022uF		25V
C81	1-102-953-00	CERAMIC	18PF	5%	50V
C82	1-102-953-00	CERAMIC	18PF	5%	50V
C83	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C84	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C85	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C86	1-124-477-11	ELECT	47uF	20%	16V
C87	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C88	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C89	1-124-443-00	ELECT	100MF	20%	10V
C101	1-124-925-11	ELECT	2.2uF	20%	50V
C102	1-124-463-00	ELECT	0.1uF	20%	50V
C103	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C104	1-163-059-00	CERAMIC MELF	0.01uF	20%	16V
C105	1-124-477-11	ELECT	47uF	20%	16V
		< FILTER >			
CF1	1-567-389-11	FILTER, CERAMIC			
CF2	1-567-389-11	FILTER, CERAMIC			
		< OSCILLATOR >			
CF21	1-577-075-11	OSCILLATOR, CERAMIC (19kHz)			
		< IF TRANSFORMER >			
CFT21	1-404-853-11	TRANSFORMER, IF (CERAMIC FILTER)			
		< CONNECTOR >			
* CNJ1	1-564-342-11	PIN, CONNECTOR 8P			
* CNJ2	1-564-339-00	PIN, CONNECTOR 5P			
* CNJ3	1-564-341-11	PIN, CONNECTOR 7P			
* CNJ4	1-564-337-00	PIN, CONNECTOR 3P			
		< FM FRONT END >			
FE1	1-463-862-21	FRONT END, FM			

Ref. No.	Part No.	Description			Remark
		< ENCAPSULATED COMPONENT >			
FE61	1-236-461-11	ENCAPSULATED COMPONENT			
		< IC >			
IC21	8-759-821-45	IC LA1851N			
IC81	8-759-820-91	IC LC7218			
		< INDUCTOR >			
L1	1-410-645-31	MICRO INDUCTOR 100uH			
L3	1-410-501-11	MICRO INDUCTOR 2.2uH			
L21	1-410-171-11	MICRO INDUCTOR 1mmH			
		< LOW PASS FILTER >			
LPF21	1-235-164-00	IC FILTER, LOW PASS			
LPF22	1-235-164-00	IC FILTER, LOW PASS			
		< TRANSISTOR >			
Q1	8-729-230-99	TRANSISTOR 2SC2669-0Y			
Q2	8-729-230-99	TRANSISTOR 2SC2669-0Y			
Q21	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q22	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q23	8-729-900-61	TRANSISTOR DTA114ES			
Q24	8-729-900-80	TRANSISTOR DTC114ES			
Q26	8-729-900-80	TRANSISTOR DTC114ES			
Q81	8-729-900-61	TRANSISTOR DTA114ES			
Q82	8-729-900-80	TRANSISTOR DTC114ES			
Q83	8-729-202-67	TRANSISTOR 2SK246-GR3			
Q84	8-729-230-93	TRANSISTOR 2SC3113-AB			
		< RESISTOR >			
⚠R1	1-249-401-11	CARBON (SMALL)	47	5%	1/4W F
R2	1-249-329-11	CARBON MELF	330	5%	1/8W
R3	1-249-329-11	CARBON MELF	330	5%	1/8W
R4	1-249-329-11	CARBON MELF	330	5%	1/8W
R5	1-249-329-11	CARBON MELF	330	5%	1/8W
R6	1-249-350-11	CARBON MELF	18K	5%	1/8W
R7	1-249-329-11	CARBON MELF	330	5%	1/8W
R8	1-249-332-11	CARBON MELF	560	5%	1/8W
R9	1-249-352-11	CARBON MELF	27K	5%	1/8W
⚠R21	1-249-404-00	CARBON (SMALL)	82	5%	1/4W F
R22	1-249-428-11	CARBON (SMALL)	8.2K	5%	1/4W
R23	1-249-335-11	CARBON MELF	1K	5%	1/8W
R24	1-249-353-11	CARBON MELF	33K	5%	1/8W
R25	1-249-346-11	CARBON MELF	8.2K	5%	1/8W
R27	1-249-432-11	CARBON (SMALL)	18K	5%	1/4W
R28	1-249-423-11	CARBON (SMALL)	3.3K	5%	1/4W
R29	1-249-347-11	CARBON MELF	10K	5%	1/8W

Ref. No.	Part No.	Description			Remark
R31	1-249-331-11	CARBON MELF	470	5%	1/8W
R32	1-249-347-11	CARBON MELF	10K	5%	1/8W
R33	1-249-347-11	CARBON MELF	10K	5%	1/8W
R34	1-249-437-11	CARBON (SMALL)	47K	5%	1/4W
R35	1-249-335-11	CARBON MELF	47K	5%	1/8W
R37	1-249-359-11	CARBON MELF	100K	5%	1/8W
R38	1-249-363-11	CARBON MELF	220K	5%	1/8W
R39	1-249-339-11	CARBON MELF	2.2K	5%	1/8W
R40	1-249-338-11	CARBON MELF	1.8K	5%	1/8W
R41	1-249-344-11	CARBON MELF	5.6K	5%	1/8W
R42	1-249-359-11	CARBON MELF	100K	5%	1/8W
R43	1-249-363-11	CARBON MELF	220K	5%	1/8W
R44	1-249-339-11	CARBON MELF	2.2K	5%	1/8W
R45	1-249-338-11	CARBON MELF	1.8K	5%	1/8W
R46	1-249-344-11	CARBON MELF	5.6K	5%	1/8W
⚠R47	1-249-409-11	CARBON (SMALL)	220	5%	1/4W F
R48	1-249-359-11	CARBON MELF	100K	5%	1/8W
R49	1-249-359-11	CARBON MELF	100K	5%	1/8W
R61	1-249-359-11	CARBON MELF	100K	5%	1/8W
R62	1-249-355-11	CARBON MELF	47K	5%	1/8W
R63	1-249-315-11	CARBON MELF	22	5%	1/8W
R81	1-249-335-11	CARBON MELF	1K	5%	1/8W
R82	1-249-335-11	CARBON MELF	1K	5%	1/8W
R83	1-249-335-11	CARBON MELF	1K	5%	1/8W
R84	1-249-335-11	CARBON MELF	1K	5%	1/8W
R85	1-249-347-11	CARBON MELF	10K	5%	1/8W
R86	1-249-335-11	CARBON MELF	1K	5%	1/8W
R87	1-249-347-11	CARBON MELF	10K	5%	1/8W
R88	1-249-343-11	CARBON MELF	4.7K	5%	1/8W
R89	1-249-335-11	CARBON MELF	1K	5%	1/8W
R90	1-249-347-11	CARBON MELF	10K	5%	1/8W
R91	1-249-335-11	CARBON MELF	1K	5%	1/8W
⚠R92	1-249-401-11	CARBON (SMALL)	47	5%	1/4W F
R101	1-249-341-11	CARBON MELF	3.3K	5%	1/8W
R102	1-249-332-11	CARBON MELF	560	5%	1/8W
R103	1-249-335-11	CARBON MELF	1K	5%	1/8W
R104	1-249-328-11	CARBON MELF	270	5%	1/8W
R105	1-249-343-11	CARBON MELF	4.7K	5%	1/8W
R106	1-249-339-11	CARBON MELF	2.2K	5%	1/8W
R107	1-249-343-11	CARBON MELF	4.7K	5%	1/8W
R108	1-249-323-11	CARBON MELF	100	5%	1/8W
R109	1-249-343-11	CARBON MELF	4.7K	5%	1/8W
⚠R110	1-249-405-11	CARBON (SMALL)	100	5%	1/4W F
CC2	1-249-366-11	CARBON MELF	0	5%	1/5W
CC3	1-249-366-11	CARBON MELF	0	5%	1/5W
		< VARIABLE RESISTOR >			
RV21	1-238-598-11	RES, ADJ, CARBON 2.2K			
RV22	1-238-601-11	RES, ADJ, CARBON 22K			

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TUNER | DISPLAY | CONNECTOR

Ref. No.	Part No.	Description			Remark
RV24	1-238-601-11	RES, ADJ, CARBON 22K			
		< TRANSFORMER >			
T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR			
		< TERMINAL >			
* TM1	1-537-138-21	TERMINAL BOARD, PUSH 4P (ANTENNA)			
		< CONNECTOR PIN >			
* TP1	1-560-060-00	PIN, CONNECTOR 2P			
		< CRYSTAL VIBRATOR >			
XT81	1-579-585-11	VIBRATOR, CRYSTAL (7.2MHz)			
**********					
*	A-4356-143-A	DISPLAY BOARD COMPLETE			
		**********			
*	1-645-605-12	CONNECTOR BOARD			
		**********			
*	4-932-810-11	CUSHION (FL)			
*	4-944-441-01	HOLDER (FL TUBE)			
*	4-954-788-01	HOLDER (LED)			
		< CAPACITOR >			
C601	1-124-471-00	ELECT	1000uF	20%	6.3V
C609	1-126-103-11	ELECT	470uF	20%	16V
C610	1-124-907-11	ELECT	10uF	20%	50V
C701	1-126-177-11	ELECT	100uF	20%	10V
C702	1-164-159-11	CERAMIC	0.1uF		50V
C703	1-126-157-11	ELECT	10uF	20%	16V
C704	1-124-463-00	ELECT	0.1uF	20%	50V
C705	1-161-494-00	CERAMIC	0.022uF		25V
C706	1-162-198-31	CERAMIC	8.2PF	10%	50V
C707	1-162-198-31	CERAMIC	8.2PF	10%	50V
C710	1-164-159-11	CERAMIC	0.1uF		50V
C711	1-126-157-11	ELECT	10uF	20%	16V
C712	1-126-177-11	ELECT	100uF	20%	10V
C713	1-136-173-00	FILM	0.47uF	5%	50V
C714	1-136-173-00	FILM	0.47uF	5%	50V
C715	1-136-173-00	FILM	0.47uF	5%	50V
C716	1-161-494-00	CERAMIC	0.022uF		25V
C719	1-162-306-11	CERAMIC	0.01uF	20%	16V
C720	1-162-306-11	CERAMIC	0.01uF	20%	16V
		< VIBRATOR >			
CF701	1-579-125-11	VIBRATOR, CERAMIC (8MHz)			

Ref. No.	Part No.	Description			Remark
		< CONNECTOR >			
* CNJ601	1-566-859-11	SOCKET, CONNECTOR 15P (SYSTEM CONTROL 1)			
* CNJ602	1-564-341-11	PIN, CONNECTOR 7P			
* CNJ603	1-564-337-00	PIN, CONNECTOR 3P			
* CNJ604	1-565-561-11	PIN, CONNECTOR 3P (AU BUS)			
* CNJ701	1-564-342-11	PIN, CONNECTOR 8P			
* CNJ702	1-564-339-00	PIN, CONNECTOR 5P			
		< DIODE >			
D701	8-719-987-63	DIODE	1N4148M		
D702	8-719-987-63	DIODE	1N4148M		
D706	8-719-987-63	DIODE	1N4148M		
D710	8-719-301-39	LED	SEL2210S-D (PRESET)		
D711	8-719-301-39	LED	SEL2210S-D (TUNING)		
D712	8-719-987-63	DIODE	1N4148M		
D714	8-719-987-63	DIODE	1N4148M		
D715	8-719-010-29	DIODE	UZ-4.3BSB		
D716	8-719-987-63	DIODE	1N4148M		
D717	8-719-987-63	DIODE	1N4148M		
D718	8-719-987-63	DIODE	1N4148M		
		< FLUORESCENT INDICATOR >			
FLT701	1-519-709-11	INDICATOR TUBE, FLUORESCENT			
		< IC >			
IC701	8-759-059-85	IC	TMP87CC70F-6021		
IC702	8-759-500-31	IC	X24C01P		
IC703	8-749-920-83	IC	GP1U52XB		
IC704	8-759-515-58	IC	PST572H		
		< COIL >			
L701	1-410-521-11	INDUCTOR	100uH		
L702	1-410-521-11	INDUCTOR	100uH		
		< TRANSISTOR >			
Q701	8-729-900-80	TRANSISTOR	DTC114ES		
Q702	8-729-900-80	TRANSISTOR	DTC114ES		
Q705	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q706	8-729-900-80	TRANSISTOR	DTC114ES		
Q707	8-729-620-05	TRANSISTOR	2SC2603-EF		
		< RESISTOR >			
R601	1-249-393-11	CARBON	10	5%	1/4W F
R701	1-249-417-11	CARBON	1K	5%	1/4W F
R702	1-249-417-11	CARBON	1K	5%	1/4W F
R703	1-249-417-11	CARBON	1K	5%	1/4W F
R704	1-249-417-11	CARBON	1K	5%	1/4W F

Ref. No.	Part No.	Description				Remark
R705	1-249-417-11	CARBON	1K	5%	1/4W	F
R706	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R707	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R708	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R709	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R710	1-249-429-11	CARBON	10K	5%	1/4W	
R711	1-249-429-11	CARBON	10K	5%	1/4W	
R712	1-249-411-11	CARBON	330	5%	1/4W	
R714	1-249-429-11	CARBON	10K	5%	1/4W	
R715	1-249-417-11	CARBON	1K	5%	1/4W	F
R716	1-249-429-11	CARBON	10K	5%	1/4W	
R717	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R718	1-249-429-11	CARBON	10K	5%	1/4W	
R719	1-249-429-11	CARBON	10K	5%	1/4W	
R720	1-249-429-11	CARBON	10K	5%	1/4W	
R721	1-249-429-11	CARBON	10K	5%	1/4W	
R722	1-249-429-11	CARBON	10K	5%	1/4W	
R723	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R724	1-249-429-11	CARBON	10K	5%	1/4W	
R725	1-249-417-11	CARBON	1K	5%	1/4W	F
R726	1-249-417-11	CARBON	1K	5%	1/4W	F
R727	1-249-417-11	CARBON	1K	5%	1/4W	F
R728	1-249-417-11	CARBON	1K	5%	1/4W	F
R729	1-249-417-11	CARBON	1K	5%	1/4W	F
R730	1-249-417-11	CARBON	1K	5%	1/4W	F
R734	1-249-417-11	CARBON	1K	5%	1/4W	F
R736	1-249-429-11	CARBON	10K	5%	1/4W	
R737	1-249-409-11	CARBON	220	5%	1/4W	F
		< SWITCH >				
S701	1-554-303-21	SWITCH, TACTILE (WAKE UP TIMER 1)				
S702	1-554-303-21	SWITCH, TACTILE (WAKE UP TIMER 2)				
S703	1-554-303-21	SWITCH, TACTILE (REC TIMER)				
S705	1-554-303-21	SWITCH, TACTILE (MEMORY/NEXT)				
S706	1-554-303-21	SWITCH, TACTILE (MODE)				
S707	1-554-303-21	SWITCH, TACTILE (STEREO/MONO)				
S708	1-554-303-21	SWITCH, TACTILE (BAND)				
S709	1-554-303-21	SWITCH, TACTILE (-)				
S710	1-554-303-21	SWITCH, TACTILE (+)				
		< VIBRATOR >				
XT701	1-527-997-21	VIBRATOR, CRYSTAL (32kHz)				

****

9-957-393-11

Sony Corporation
Audio Group

English
92H0435-1
Printed in Japan
© 1992. 8

Published by Customer Relations and Service Group